

Hand-held emitter user manual



E216L

 
16-channel LCD emitter
 Input voltage: 2*1.5V (AAA)
 Emission frequency: 433.92MHz
 Emission power: 10mw
 Working temperature: -10°C ~ 50°C
 Emission range: > 50m
 Including wall mounting bracket



E216LT

16-channel LCD timing emitter
 Input voltage: 2*1.5V (AAA)
 Emission frequency: 433.92MHz
 Emission power: 10mw
 Working temperature: -10°C ~ 50°C
 Emission range: > 50m
 Including wall mounting bracket

LCD Instruction

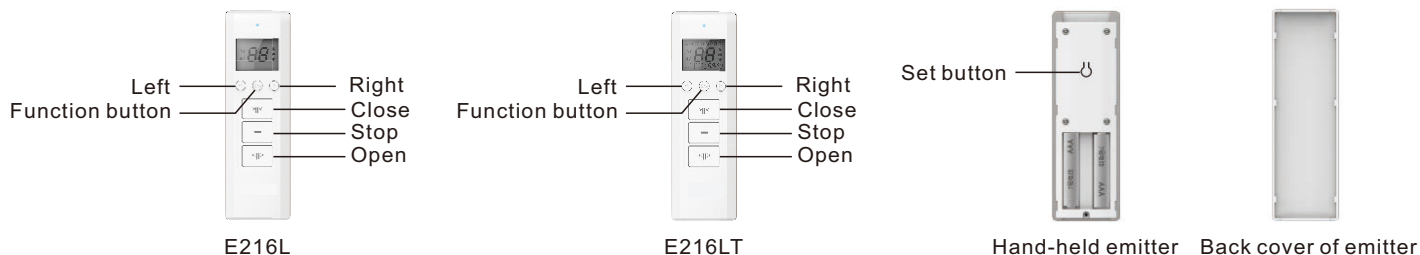

Function setting of E216L

① Setting the maximum channels



Long press left and right button within 5s, the maximum channel in the lower right corner will flash.

Notice: The maximum channel number is 16.



Press left to reduce the channel number.




Press right to increase the channel number.



Press "S/A" to confirm.

② Choose single channel or All channels

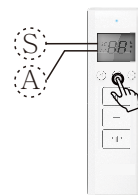

Short press "S/A", "S" means single channel, "A" means all channels.

Function setting of E216LT

① Setting the maximum channels number



Long press left and right button within 5s, the maximum channel in the lower right corner will flash.

Notice: The maximum channel number is 16.



Press left to reduce the channel number.



Press right to increase the channel number.



Press "S/A" to confirm.

② Choose single channel or All channels



Short press "S/A", "S" means single channel, "A" means all channels.

③ Set the current time



Long press the left button to enter time setting status, the number on lower left corner displays hour will flash, press the left or right button to increase or reduce.



Short press the S/A button to enter minute setting status, the number on lower left corner displays minute will flash, press the left or right button to increase or decrease.

Mo Tu We Th Fr Sa Su




Short press the S/A button to enter weekday setting status, the number on the top displays weekday will flash, press the left or right button to increase or decrease.



Short press the S/A button to operate above steps circularly, short press stop button to confirm (can confirm during any step)

④ Set timing

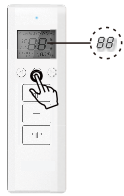

Long press the S/A button to enter timing status, the number displays channel will flash, press the left or right button to choose the channel you need to set.



Short press the S/A button to enter timing status of open or close the curtain, when the inward arrow flashes means now program is timing for close, when the outward arrow flashes, means timing for open, toggle status by left or right button.



Short press the S/A button enter timing for hour, press left or right button to increase or decrease hours.



Short press the S/A button enter timing for minute, press left or right button to increase or decrease minute.

Mo Tu We Th Fr Sa Su



Short press the S/A button enter timing for weekday, press left or right button to choose week, set weekday accordingly.



Short press the S/A button enter start or cancel timing set when ON flashes, means start timing, when OFF flashes, means cancel timing, toggle by left or right button.



Short press the S/A button to operate above steps circularly, short press stop button to confirm (can confirm during any step)

⑤ Quick start or cancel timing



Long press the right button 5s, can quick start or cancel timing program of current channel.

Match code of LCD emitter

① Match code by short pressing the LEARN button



Motor was powered on, press the LEARN button.



Choose channel by left and right button.



Press set button of the emitter. (no match code)



The motor will vibrate once in every direction, code matching is successful.



The motor will vibrate once to each direction. Then these 2 emitters can control the motor.

② Copy code



Press set button of the emitter which has been matched already.



The motor will vibrate once to each direction.



Long press set button 3s of the emitter which has been matched already.



The motor will vibrate once to each direction, then the motor is under being matched state.



Then press set button of the emitter which you want to copy code.

- 1, There are two types for curtain motor to match code, one is short press learn button of motor, the other one is copy code.
- 2, When motor is in status of learning, press the set button of emitter which never matched code before, motor will vibrate once, matching code successfully.
- 3, Choose channel through left and right button, the screen displays corresponding channel every time you press left or right button.

Other operation, please refer to the motor instruction.

Instruction:

1. Do not put the emitter on the humid environment.
2. Please change the new battery after the battery is used up in time.
3. Please press the button within 10s every time.