

# Smart Curtain Motor Kit

Product manual

Please refer to this manual before using the product


# 01/Product instruciton

This is a kind of fast splicing motorized curtain kit, which includes curtain motor, fast splicing track, emitter and all necessary accessories for DIY assembly. Customers can freely splice the track length according to the installation size. The input power supply of curtain motor is AC100-240V or DC5V1A , curtain motor can realize local control, remote control, timing, voice speaker control and other intelligent platform control. The smart control solutions include: wifi, zigbee, Bluetooth, 485Bus protocol control, KNX,etc.(Get more details in different versions for specific functions and protocols)


Specification list:2mts kit, 3mts kit,4mts kit,5mts kit,6mts kit,7mts kit

	Specifications					
	MAGE10B-2M	MAGE10B-3M	MAGE10B-4M	MAGE10B-5M	MAGE10B-6M	MAGE10B-7M
Suitable length	≤2.1M	≤3.1M	≤4.1M	≤5.1M	≤6.1M	≤7.1M
Box size	1152 * 220 * 70mm				1152 * 280 * 70mm	


## kit

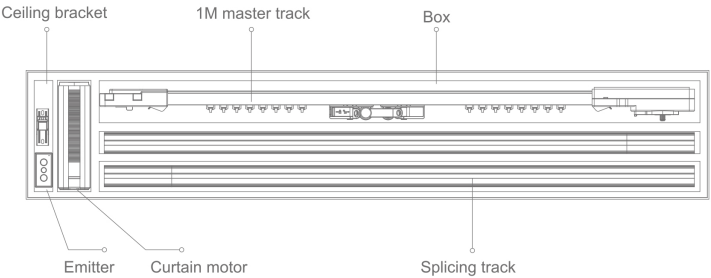

## Motorized curtain system

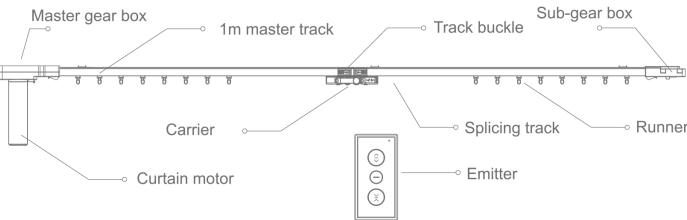

# Curtain motor

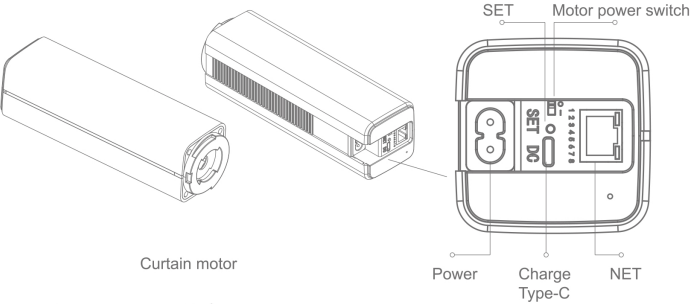


## • Motor power switch

Before installing or connecting the motor to the power supply, please turn on the motor power switch on the bottom, turn it to the "-" (factory default position is "o"), then use it as normal. This is the power protection switch, if your motor is not in use for a long time, we suggest that you turn it off.


## • RJ45 port connection

- 1 # and 2 # are control wires (control the motor running direction-open or close)
- 3# is reserved wire;
- 4# is the public wire;
- 5 #and 6#are RS485 B bus control wires;
- 7# and 8# are RS485 A bus control wires.

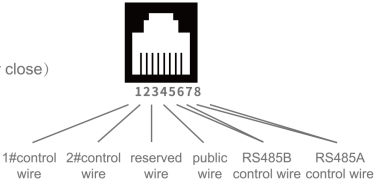

## • Double key reset switch

 When 1# and 4# public wire are contacted briefly (Press briefly then release) , motor opens, and the motor closes when they touched again ; when 2# and 4# public wire are contacted briefly,curtain motor closes, and the motor closes when they touched again.




- When K1 is closed, open K2 , motor opens (or close) the curtain
- When K1 is opened, open K2,the motor stops running
- When K1 is opened, close K2, motor closes (or open) the curtain
- When K1 is opened, open K2,the motor stops running

The switch is open when the motor is stop

## • Double key interlock switch

 Two control wires (control running direction) , one public wire.

1# control and 4# public wire keep in connect(Keep pressing without releasing), the curtain is opened, when disconnected(release it), the curtain motor stops running; 2 # control wire and 4 # public wire keep in connect, the curtain is closed , when disconnect ,the curtain motor stops running.



- When K1 is closed, open K2, the curtains open (or close)
- When K1 is opened,open K2 , the motor keeps running.
- When K1 is closed again, open K2 , the motor stops running. When K1 is opened,open K2 , the motor stops running.
- When K1 is opened,close K2, . the curtains close (or open)
- When K1 is opened,open K2 , the motor keeps running.
- When K1 is opened again, close K2 , the motor stops running.
- When K1 is opened,open K2 , the motor stops running.


The switch is open when the motor is stop

## • One key cycle switch

Two control (direction) wires, 1 # and 2 #, public wire 4 #.

Any control wire 1 # or 2 # are briefly connected to 4 # wire for the first time,the motor runs in the opening(closing )direction;

when they are briefly connected to 4 # wire for the second time,the motor stops running; when they are briefly connected to 4 # wire for the third time,the motor runs in the closing(opening )direction. Execute commands in turn and cyclically

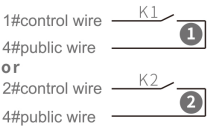


- ① and ② have the same function, take method ① as an example
- When the motor stops running and K1 is opening, users close K1, the motor opens(or close).
- When K1 is opened, motor keeps running. When K1 is closed, motor stops running.
- When K1 is opened, motor stops running. When K1 is closed,the motor closes(or opens).
- When K1 is opened, motor keeps running. When K1 is closed, motor stops running.When K1 is opened, motor stops running,execute commands in turn and cyclically.
- ② and ① have the same function, take method ①

## Emitter


Hand-held and wall-fixed Emitters available, Single or dual channels are available.

Emitters are equipped with wall stickers and connection frame

Product name : Remote  
Product type : PRE01  
Frequency : 433.92MHz  
Channel : Single channel/Double channel  
Battery : 3V CR2032  
Battery life : 2 years (Rated power 210MAH)  
Distance : 50 m  
Fixed mode : magnetic suction base  
Size : 66mm X 33mm X 10mm

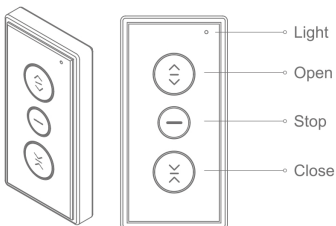

Hand-held single channel emitter

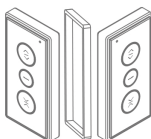

Hand-held dual channel




Wall type single channel emitter




Wall type dual channel emitter

### • Installation

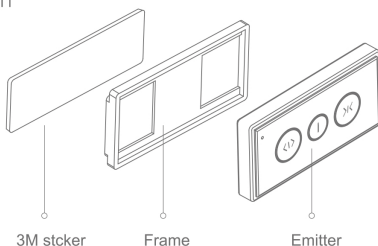

### • Battery replacement

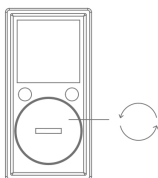

Rotate battery cover ,  
replace the battery  
Battery Type NO.:CR2032

### • Type of track

1. Basic assemble track (1m master track);
2. Standard 1m track,
3. Adjustable track. The adjustable track is composed of 50cm, 20cm, 10cm.


NOTE: the track buckle direction is fixed ,CAN NOT be reversed




# 02/Track splicing

Adopt suitbale kit according to curtain length, refer to below operations:  
Here, take the case of 2m kit with installation size of 1.5m as an example


1. Open the lock of sub gear box, and take off the box.

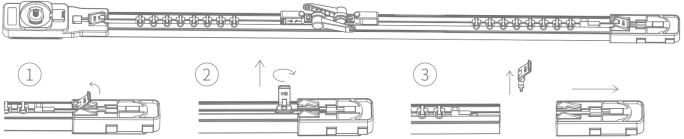


2. Insert the track buckle into the track , fix one side.

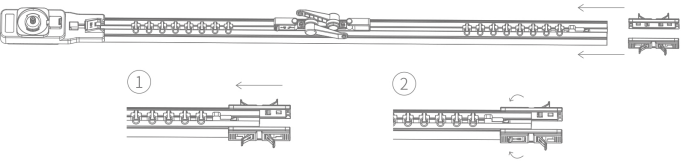


3. Insert 0.5m track into the other side of track buckle, then splice two tracks tightly, lock the buckle

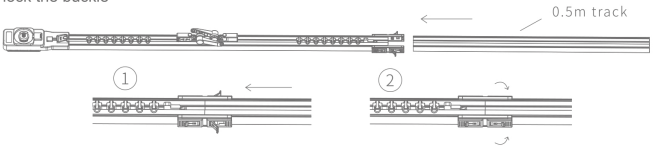

4. Install the sub gear box again , and pull the positioner to the end of the track at sub-gear box side. Lock the buckle of sub gear box when hear a sound of click..

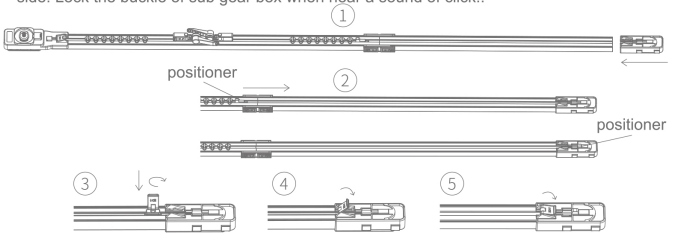

5. Open the lock of the master carrier, then pull the two carriers to the each end of the track. Then lock of the master carrier. Now the whole track splicing is finished..

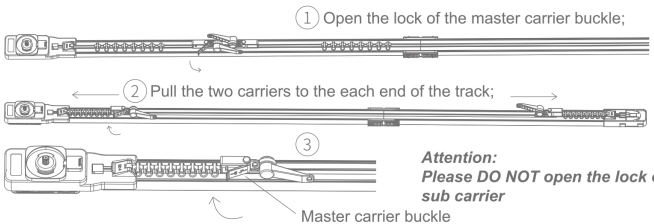

## Runners

Enough runners (8pcs/m) have been put into track in factory. The quantity of runners can be increased or decreased accordingly




Open the master gear box, take out or put in runners  
NOTE:DO NOT PULL OUT master gear box after releasing the buckle

Sub-gear box side:Increase or reduce runners before locking the buckle


## 03/Track installation

Please install the ceiling bracket before installing the track .  
And measure the distance to fix the ceiling bracket .  
Then clip the track into the bracket.

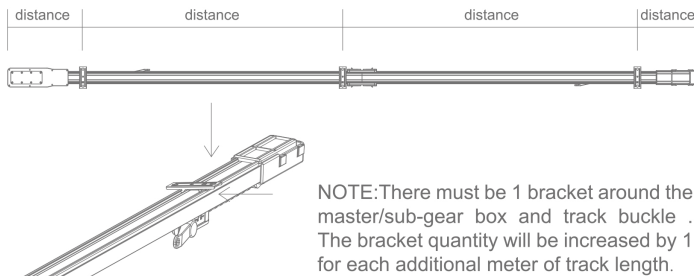


## 04/Curtain motor installation

Insert the motor head into the slot of the master gear box ,  
Turn it 90 ° counterclockwise and turn on the motor power switch

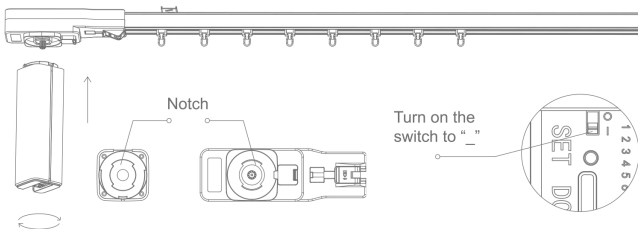

## 05/Disassemble of curtain motor




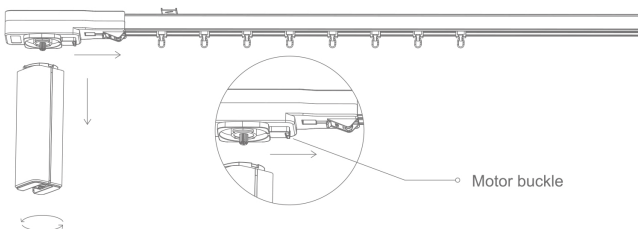



Pull the motor buckle ,Turn it 90°clockwise,remove the motor

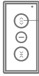


## 06/Motor- Remote operations

There is single channel emitter included in kit, it has been coed with motor ,can work with the motor directly

### Speed adjustment of curtain motor (Effective for the current running)


When the motor runs from standstill			Adjust speed during its running
	Open		 Open
	Open		
	Open		
Press OPEN/close once the motor runs at silent speed	Press OPEN/close twice the motor runs at medium speed	Press OPEN/close three times the motor runs at high speed	When the motor runs at a certain speed to open /close, press the remote OPEN/CLOSE, the motor will run in a faster speed , if it is already at high speed, it will not accelerate. Note: When only controlled by the remote control, the motor running speed can be adjusted

### Code matching between motor and remote

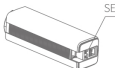


Press the SET button at the bottom of motor the indicator light flashes once

▶




Stop

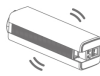


Secondm, press the STOP button on the remote, the motor (or pulley if you have installed motor on track) vibrates once, It means code matching is successfully

### Release the control of current remote/all remote controls

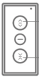


Open

Close

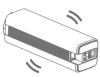


Press OPEN and CLOSE at the same time the motor vibrates once the yellow indicator light stays on for a while

▶




Stop

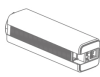


Press STOP 7 times, each time you press the indicator light turns on and off alternately and the light goes out after 7th pressing

▶






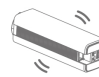



Open

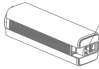


Then press CLOSE/OPEN the motor vibrates once release the current remote control/ all remote controls successfully

### Direction change


Method 1	Method 2
 <p>SET</p> <p>Press motor SET button 5 times indicator flashed 5times and the motor vibrates once Changing direction is successful</p>	 <p>Open</p> <p>Close</p>  <p>First, press OPEN and CLOSE at the same time, the motor vibrates once indicator light stays on for a while</p> <p>▶</p>  <p>Stop</p>  <p>Then, press STOP indicator light goes out</p> <p>▶</p>  <p>Open</p>  <p>Next , press OPEN again The motor vibrates once Changing direction is successful</p>

### Set the limit position of opening/closing

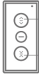


Open

Close

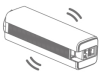


Let the motor stop at the designated position first press OPEN and CLOSE at the same time until the motor vibrates once, the yellow indicator stays on for a while

▶




Stop

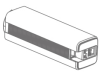


Then press STOP 5 times, each time you press the indicator light turns on and off alternately and the light goes out after 5th pressing

▶




Open

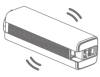


Next press OPEN/CLOSE once, the motor vibrates once, set the limit position of opening/closing is successful

### Delete the limit position of opening/closing

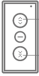


Open

Close

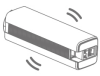


Press the OPEN and CLOSE at the same time until the motor vibrates once the yellow indicator stays on for a while

▶




Stop

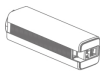


Press STOP 3times, each time you press the indicator light turns on and off alternately and the light goes out after the third pressing

▶



Open

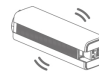

Press the OPEN/CLOSE once motor vibrates once, we delete the limit positions of opening/closing successfully

## Set the intermediate (third) position



Let the motor stop at the designated position first, press the OPEN and CLOSE at the same time



Press STOP once, indicator light flashed once and goes out



Press CLOSE once, the motor vibrates once the intermediate (third) position is set successfully  
Note: Only one intermediate position can be set

## Factory reset

### Method 1



Long press and hold the motor SET key until the motor finishes 3 vibrations  
After releasing the key, the motor will vibrate twice more. Factory reset is finished

### Method 2



Press the OPEN and CLOSE at the same time until the motor vibrates once  
The indicator light stays on for a while



Then long press the STOP until motor vibrates once, after releasing the key, the motor will vibrate twice more. Factory reset is finished

## Remote copy code



Press the OPEN and CLOSE of remote at the same time until motor vibrates once the yellow indicator light stays on for a while



Press STOP of A 8 times, each time you press the indicator light turns on and off alternately and the light goes out after the 8th pressing



Press CLOSE of A once, the motor vibrates once, which means the motor enters in code copy mode



Next, press the STOP button of remote B the motor vibrates once  
Now remote B can also control the motor

## Description of motor indicator

1. The motor USB or AC is powered on, and the dual lights flash 5 times at the same time;
2. The electric quantity of the motor can support the operation of the motor. After stopping, the yellow light will stay on for 3 seconds when the electric quantity is more than 80%, and it will go out after the yellow light flashes 5 times when the electric quantity is less than 80%;
3. The motor power cannot support the motor operation, and the yellow green light flashes alternately for 5 times
4. For code matching operation, briefly press the key once, and the yellow indicator light will turn on and off, and then turn on again after 10 seconds.
5. For distribution network operation, press the SET three times, In the process of matching network: the green indicator flashes for 60 seconds at most  
Connect to the router: the green indicator is off;  
Connect to the network: the green indicator is on.
6. The yellow (green) indicator light : in the low power consumption state, the indicator light will wake up when motor is started manually or press emitter buttons.
7. The yellow (green) indicator is off after 3 seconds without any operation.

## Function differences when motor is


1. Powered on: Both normal and intelligent functions work well-remote (radio), APP, smart speakers, manual starting...;
2. Not powered : The motor can not work with intelligent control platforms or speakers, only retains normal control methods: remote (radio control) and manual starting.

## 07/DOS and DON'TS

- 1. This product is only for indoor use, do not use in humid environment or outdoor.
- 2. Pay attention to moisture proof, do not sprinkle water or other liquids on the product.
- 3. Do not place the product near the heat source.
- 4. The motor wires cannot be replaced. If the wire is damaged, the appliance should be abandoned.
- 5. Do not try to repair the motor by yourself if any fault occurs during usage.

08/Technical parameter

Product name	Smart Curtain Kit
Product type	MAGE10B
Input voltage	AC110-240V~50/60Hz ; DC5V1A
Rated power	9w
Rated current	0.1A
Protect Grade	IP20
Running speed	Adjustable in 3 gears
Working temperature	-20℃~55℃
Working humidity	0-95%RH
Insulation Grade	Class A

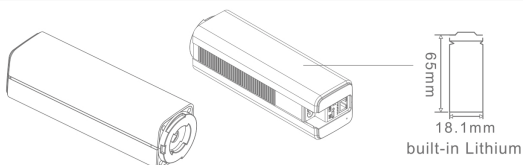

Battery capacity	2500mAh(0.2C)
Battery voltage	3.7V
Discharge Voltage Cut-off	2.75V
Charge Voltage Cut-off	4.20V

09/The names and contents of harmful substances in the products

Part Name	Hazardous Substance					
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
Plastic parts	○	○	○	○	○	○
Aluminium	○	○	○	○	○	○
Other internal structural metals	×	○	○	○	○	○
Motor PCBA	×	○	○	○	○	○
RemotePCBA	○	○	○	○	○	○
Packaging	○	○	○	○	○	○
Other part	○	○	○	○	○	○

This table is prepared according to the regulations of SJ/T 11364-2014

- :Indicates that the content of the harmful substance in all homogeneous materials of the component is below the limit requirements specified in GB/T 26572-2011;
- ✕ :Indicates that the content of the harmful substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T 26572-2011.

**10** The number in this label indicates that the environmental protection service life of the product under normal use is 10 years. Some parts have an environmental protection service life label, and the environmental protection service life shall be subject to the number in the label.

## 10/Service

- 1.We promise that customer have 3 years guarantee due to the quality problem .
- 2.If due to improper installation, not according to the manual installation , caused by the fault or damage, the company will provide paid maintenance services.
- 3.Due to voltage resistance or abnormal voltage, abnormal temperature, water, fire, other force majeure caused by the fault or damage, the company provides paid maintenance services
- 4.The company will not provide maintenance service for the failure or damage caused by artificial dismantling or unauthorized alteration of the product.

## 11/Guarantee clause

The after-sales service of electric curtain products is strictly in accordance with the Law of the People's Republic of China on the Protection of The Rights and Interests of Consumers and the Law of the People's Republic of China on Product Quality, and the implementation of after-sales three-guarantee service, the service content is as follows:

- 1.If the product fails in performance within 7 days after you sign for it, you can enjoy free return or replacement service;
- 2.In case of performance failure of the product occurring within 8-15 days from the date of receipt, you can enjoy replacement or repair services free of charge;
- 3.If the product fails in performance within 36 months from the date you sign for it, you can enjoy free maintenance services.

## 12/Non-warranty clause

- 1.Unauthorized maintenance, misuse, collision, negligence, abuse, infusion, accident, modification, incorrect use of parts other than the product, or tear, alter label stickers, security marks;
- 2.The period of validity of three packages has exceeded;
- 3.Damage caused by force majeure;
- 4.other than the product itself , technology, manufacturing, quality and other problems caused by damage or failure.

